





AUSTRALIA'S LEADING SYNTHETIC TURF MANUFACTURER

BEFORE

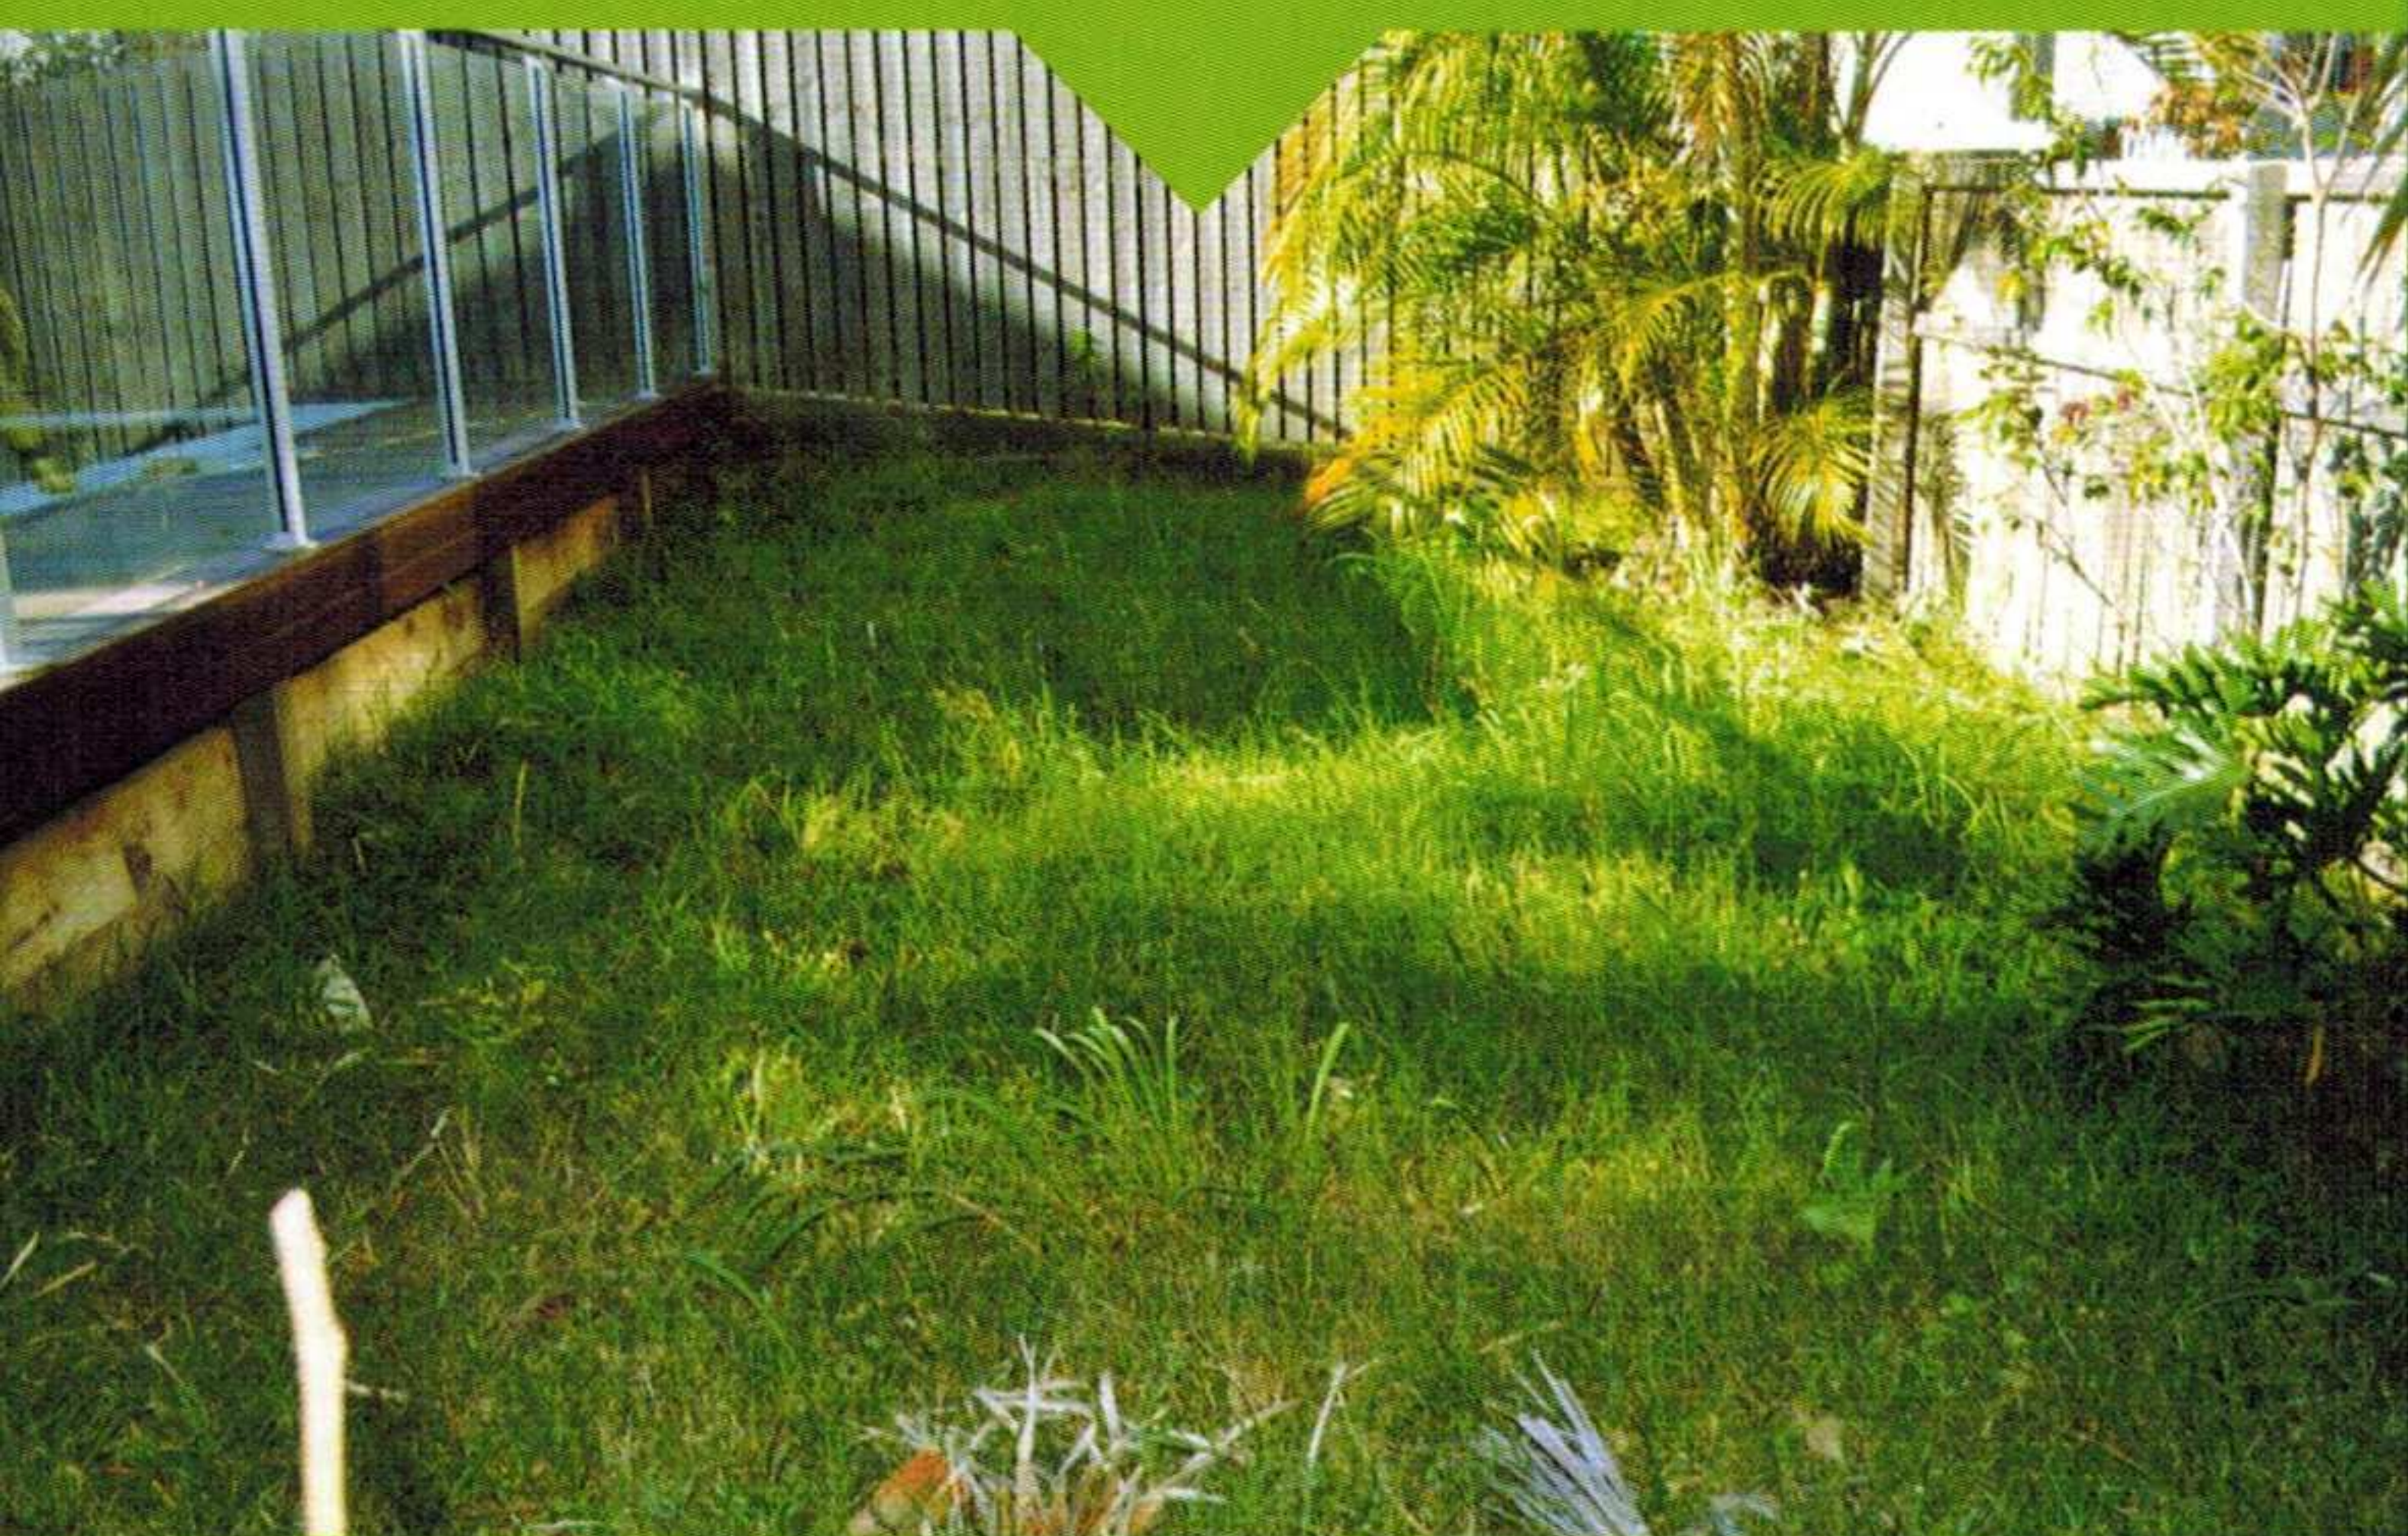

AFTER

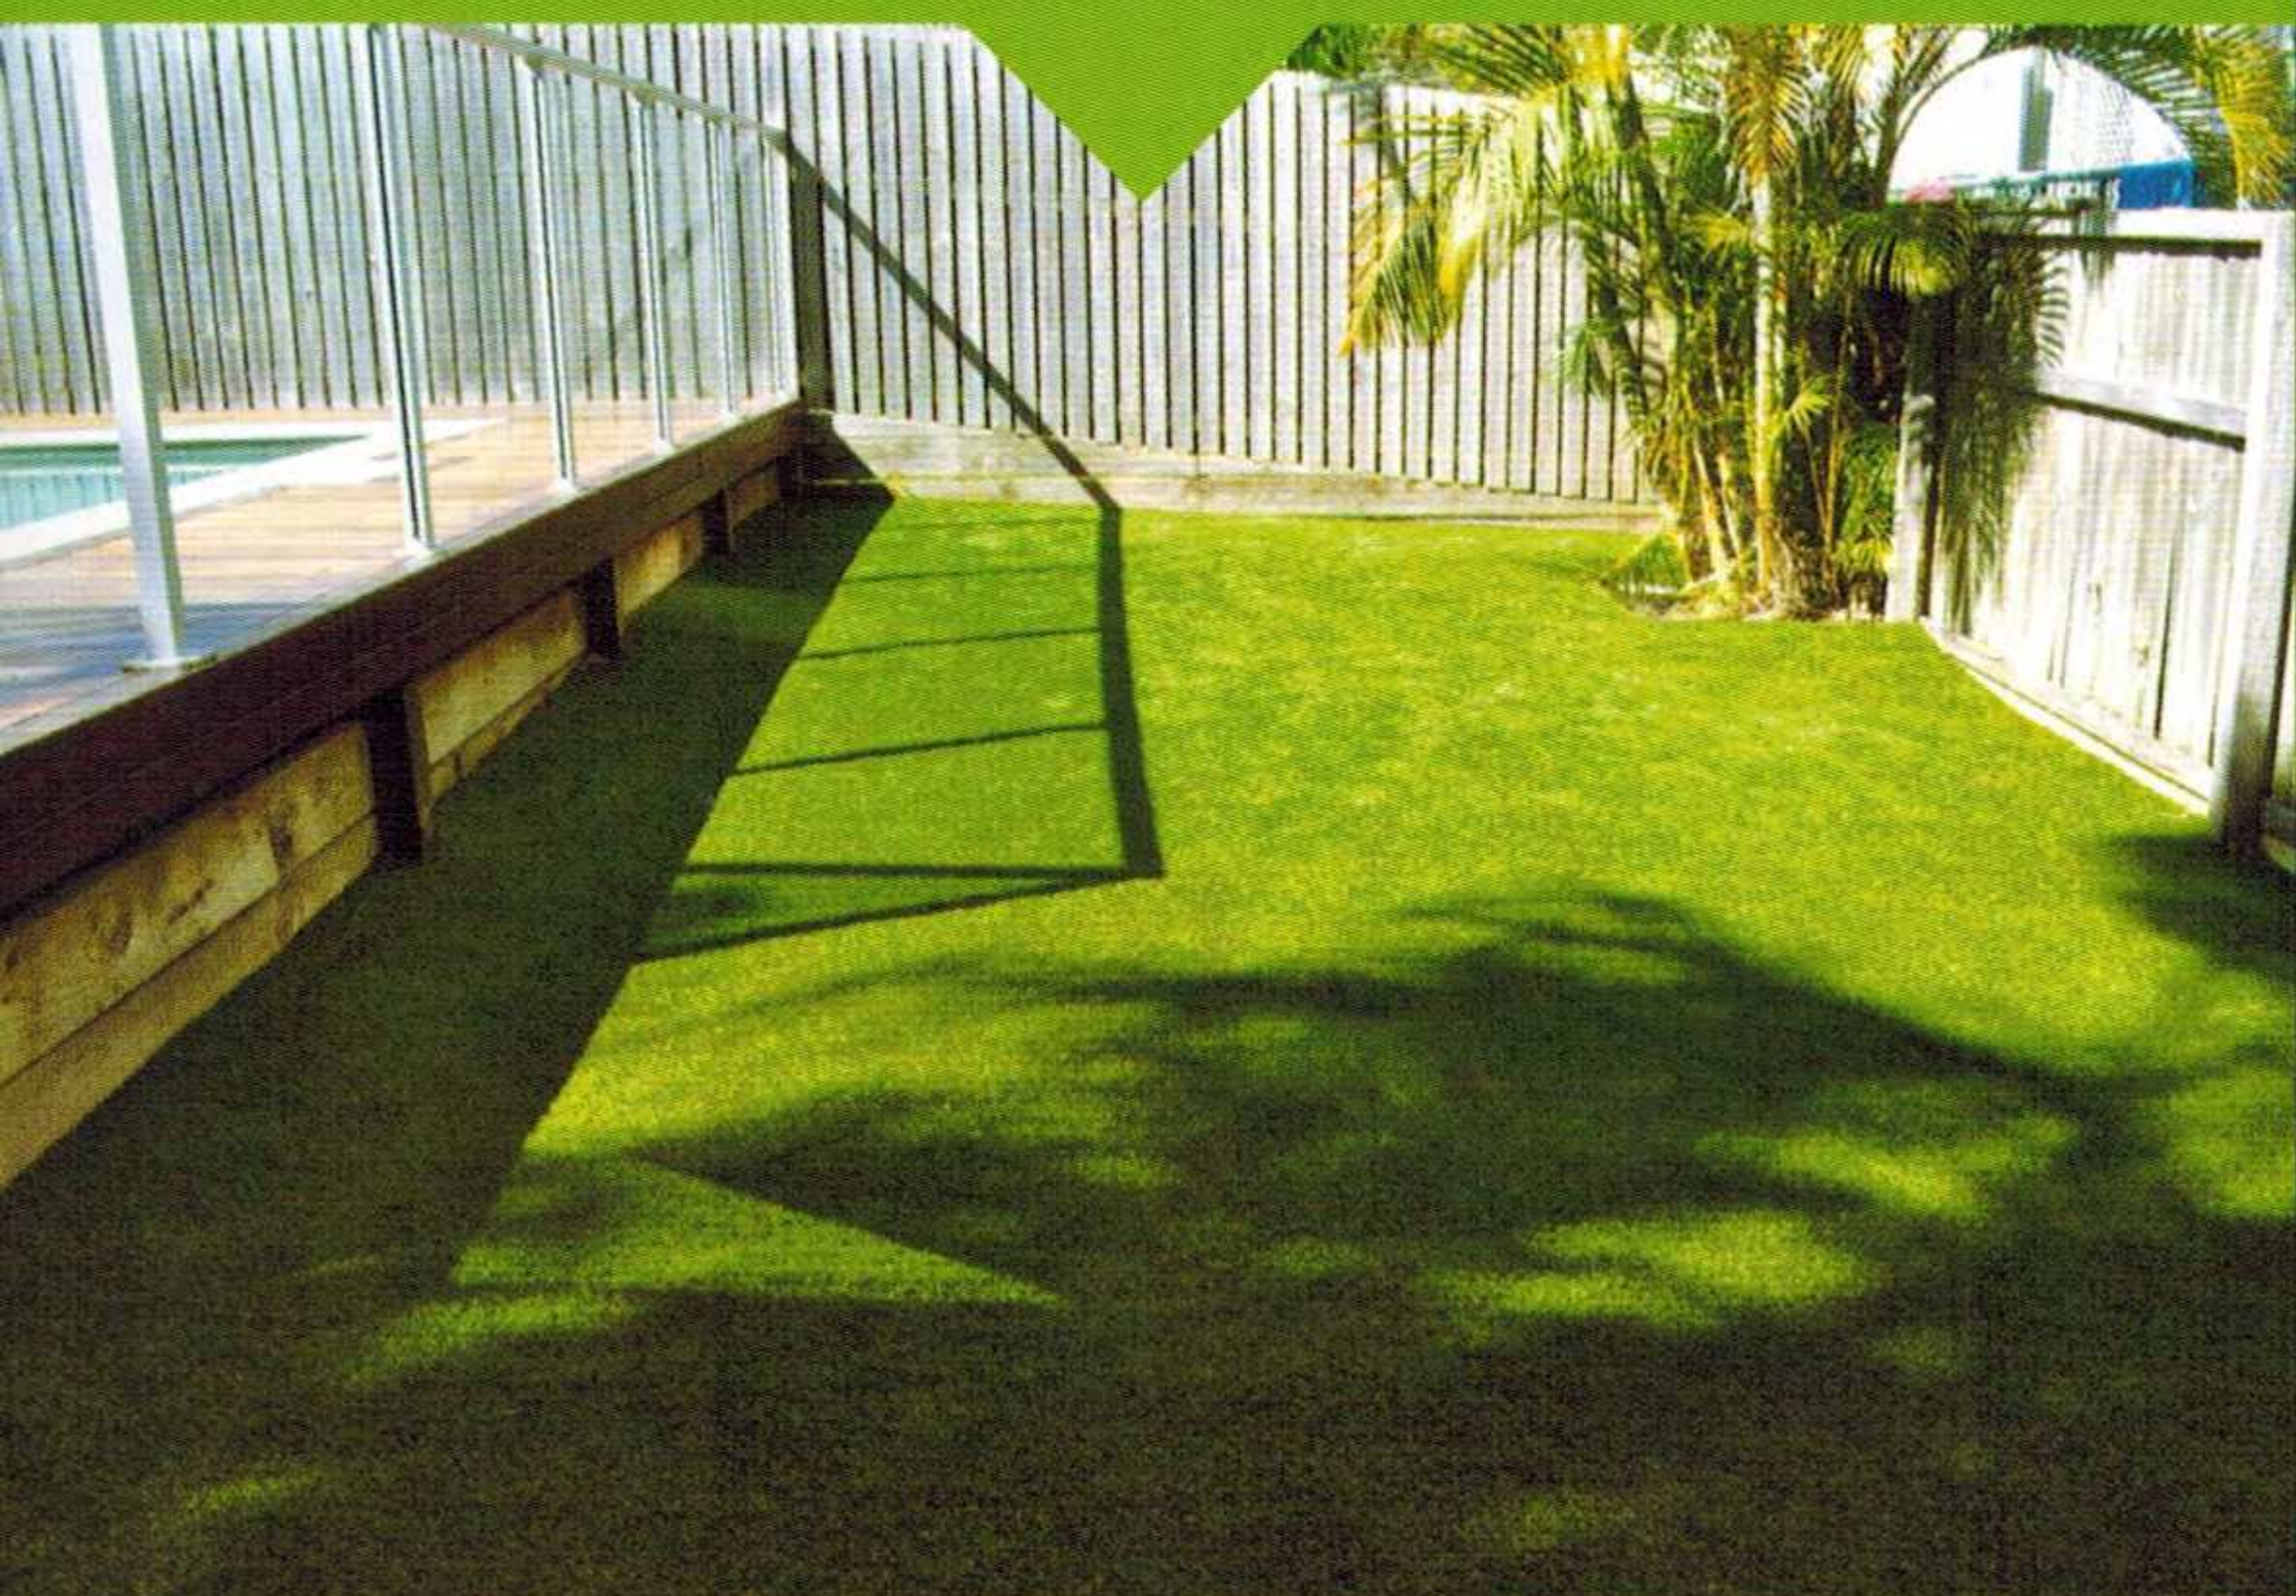



INSTALLATION GUIDE

Install your new Urban Turf Solutions synthetic lawn by following these simple steps.

CHECKLIST:

Tape measure	✓	Roller	✓
Shovel	✓	Utility knife	✓
Road base	✓	Pegs	✓
Synthetic turf	✓	Fine sand	✓

1 PREPARE THE SURFACE

Remove the existing top layer of grass (if applicable)



2 LAY THE BASE

Apply 50-100mm of road base over area. Spread evenly using a straight edge.



3 COMPACT THE BASE

Using a heavy roller, compact the area to ensure a flat and sound base is achieved



4 LAY THE TURF

Lay the turf in the required area ensuring that no creases are present.



5 TRIMMING/JOINING

If a join is required use tape and/or synthetic turf adhesive.



6 SECURE THE TURF

Using pegs, secure the turf in each corner and roughly every 500mm around the edge.



7 SPREAD SAND

Spread fine sand evenly across the surface. Sweep until it disappears into the grass.



8 ENJOY YOUR NEW URBAN TURF SOLUTIONS SYNTHETIC GRASS!

