

RETAINING WALL SYSTEM	NO. / M2	NO. / PLT	WGHT KG EA	MAX. HEIGHT	*DEL'D BRISBANE		*DEL'D SUNSHINE	
					PER M2	\$ EACH	PER M2	\$ EACH
GARDENWALL - 295LX203DX125H Light Sands / Charcoal / Beach	26.9	120	11.45	1000mm	\$155.48	\$5.78	\$163.55	\$6.08
GARDENWALL SOFT SPLIT - 295LX210DX125H Paperbark / Cocoa / Charcoal	26.9	100	14.20	1000mm	\$134.50	\$5.00	\$144.72	\$5.38
GARDENWALL FLUSH FACE - 295LX203DX125H Charcoal / Light Sands / Beach	26.9	120	12.65	1000mm	\$156.83	\$5.83	\$165.97	\$6.17
LINEARWALL - Charcoal / Beach STD BLOCK 300LX200DX150H CNR BLOCK 350LX200DX150H	22.2	90	12.80	600mm	\$161.39	\$7.27	\$168.94	\$7.61
MODERNSTONE Charcoal / Light Sands / Beach		13.77	40 48 100	*990mm (1050mm with cap)	\$155.74	\$11.31 \$14.99 \$10.73	\$165.38	\$12.01 \$15.50 \$11.16
BLOCK 440LX280DX165H								
CNR BLOCK 440LX220DX165H								
MODERNSTONE CAP 440LX280DX60H								
KEYSTONE - Charcoal / Parchment ELITE STD 609LX305DX200H ELITE CAP 609LX205DX100H ELITE CNR 450LX145DX200H	8.3 1.64L/M	40 72 36	46.00 26.20 25.60	*1000mm (1100mm with cap)	\$172.72	\$20.81 \$18.76 \$27.24	\$182.77	\$22.02 \$19.44 \$27.91
GARDEN EDGING	NO. / M2 / L/M	NO. / PLT	WGHT KG EA	MAX. HEIGHT	*DEL'D BRISBANE		*DEL'D SUNSHINE	
					\$/M2 LM	\$ EACH	\$/M2 LM	\$ EACH
EDGEPAVE 200X100X50MM Charcoal / Sand	50 M2	660	2.10		\$45.00 M2	\$0.90	\$47.50 M2	\$0.95
WEDGEBLOCK 160/120Wx140Dx125H Charcoal / Sand / Ginger / Platinum	7.14 L/M	336	5.00		\$14.85 L/M	\$2.08	\$15.78 L/M	\$2.21
PAVERS	NO. / M2	NO. / PLT	WGHT KG EA	IMAGE	*DEL'D BRISBANE		*DEL'D SUNSHINE	
					PER M2	\$ EACH	PER M2	\$ EACH
ESPLANADE 400X400X42MM Charcoal / Sand / Ginger / Platinum	6.25	108	13.60		\$51.94	\$8.31	\$54.13	\$8.66
GRIDPAVE 390X390X90MM Natural Grey Charcoal	6.57 6.57	90 90	17.04 17.04		\$56.17 \$59.79	\$8.55 \$9.10	\$59.13 \$62.74	\$9.00 \$9.55
INTERPAVE 225X112X80MM Charcoal / Natural Grey	40	380	4.25		\$71.60	\$1.79	\$76.00	\$1.90
DRIVEPAVE 230X115X50MM Charcoal / Sand	37	500	3		\$49.21	\$1.33	\$52.17	\$1.41
STREETPAVE 225X112X80MM Charcoal / Natural Grey	40	400	4.25		\$77.60	\$1.94	\$82.00	\$2.05

***DELIVERY:** The above prices are delivered to Brisbane and Gold Coast areas for orders **2 pallets and over**. Minimum delivery of **\$132** for orders under 2 pallets. For Sunshine Coast deliveries Minimum delivery will apply for orders under **3 pallets** of **\$181.50**. (Scenic Rim area POA)

****Interpave** - 2 x half pavers = 1 paver. Pallets vary in the amount of halves supplied, can be 0, 3, or 4 half paver's per layer. Can call supplier to confirm.

HOW TO BUILD USING GARDENWALL

1. Check with your local council

You should consult with your local council for design regulations prior to the construction of your wall. Councils generally require, and we recommend, that walls greater than 0.5 metres in height and walls located near loading such as a house or a car be designed and certified by a suitably qualified engineer. Boral shall have no responsibility for walls manufactured other than in accordance with the specifications and recommendations contained in this guide. Each council has different requirements so it is important you check with your local council before starting.

2. Locate your wall

Mark out the ground where your wall will be located (either by marking with stakes and a string line or by marking a line on the ground with spray paint).

3. Calculate how many blocks are required

Measure the proposed wall height and length. (Remember Gardenwall® is suitable only for walls under 1.0 metre high). Using the following table, calculate the approximate number of blocks you will need.

Let's work through an example: my wall is to be 3m long and 625mm (62.5cm) high.

Tips on calculating blocks: To work out the number of blocks without the table just multiply your m² measurement for the wall (wall height x wall length) by 27 units per m². It is often worth adding some extra blocks to allow for any mishaps (usually adding an extra 5% will cover you). Don't forget when ordering to specify colour and the type of units required.

4. Prepare the site

Dig a shallow trench approximately 130mm (13cm) deep and 350mm (35cm) wide.

Remove any roots and soft earth.

Fill the trench with coarse sand.

Compact and level the sand until it forms a 100mm (10cm) levelling pad. Compact by either manually tamping or using a mechanical plate compactor.

5. Lay the first course

Remove the retaining lip on the base of the unit (this makes levelling the first course much easier). To remove lip place at an angle on the ground and strike the lip firmly with a hammer. Wear eye protection (such as safety goggles) whilst doing this. Remove the lip on enough units to lay the **first course only**.

Place blocks side by side on the levelling pad using a string line along the back of the units for alignment.



Level each unit side to side and front to back using your spirit level. Install the agricultural drain behind the first course and surround with gravel or to the manufacturer's specification.


Tips for setting the first course: Spend time on making sure the units are level, otherwise all ensuing courses and ultimately the entire wall will not be level.

6. Backfill and compact

Place drainage material (12-20mm sized gravel) to 300mm (30cm) wide behind your first course. Shovel and compact your backfill (existing site soil) behind the drainage material.

7. Additional courses

Sweep the top of the previous course clean. Place the next course of Gardenwall® units in a running bond pattern (ie. with the vertical joints from the first course units halfway across the second course units).

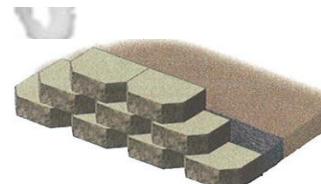


Pull the units towards the face of the wall until the lip locks behind the units below.

Shovel the drainage material and the backfill behind the second course of units (as per step 6).

Lay your third course of units and, like previous courses, place drainage material and backfill behind the wall (you don't have to compact the backfill every course but it should be done at least every alternate course ie. in 250mm (25cm) horizontal layers).

Continue stacking units, placing drainage material and compacting backfill until your wall is complete.

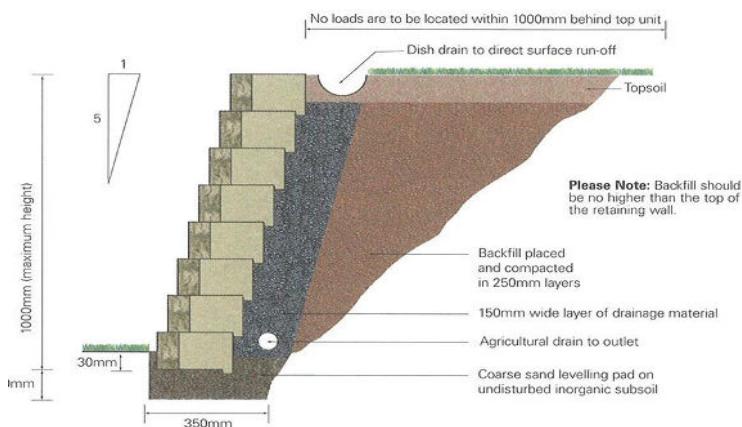

Scan QR code to view details on all Nuway store's



ASHMORE

PH: 5597 3433
ashmore@nuway.com.au

BURPENGARY

PH: 3888 8806
burpengary@nuway.com.au

CHANDLER

PH: 3390 2477
chandler@nuway.com.au

FORESTDALE

PH: 3800 5433
forestdale@nuway.com.au

LOGAN

PH: 3800 8442
logan@nuway.com.au

MANGO HILL

PH: 3491 6372
mangohill@nuway.com.au

ORMEAU

PH: 5546 7703
ormea@nuway.com.au

PINE RIVERS

PH: 3881 1447
pinerivers@nuway.com.au

REDLANDS

PH: 3207 7800
redlands@nuway.com.au

WESTERNS

PH: 3715 6200
western@nuway.com.au